


# NUWTR Hardware Description

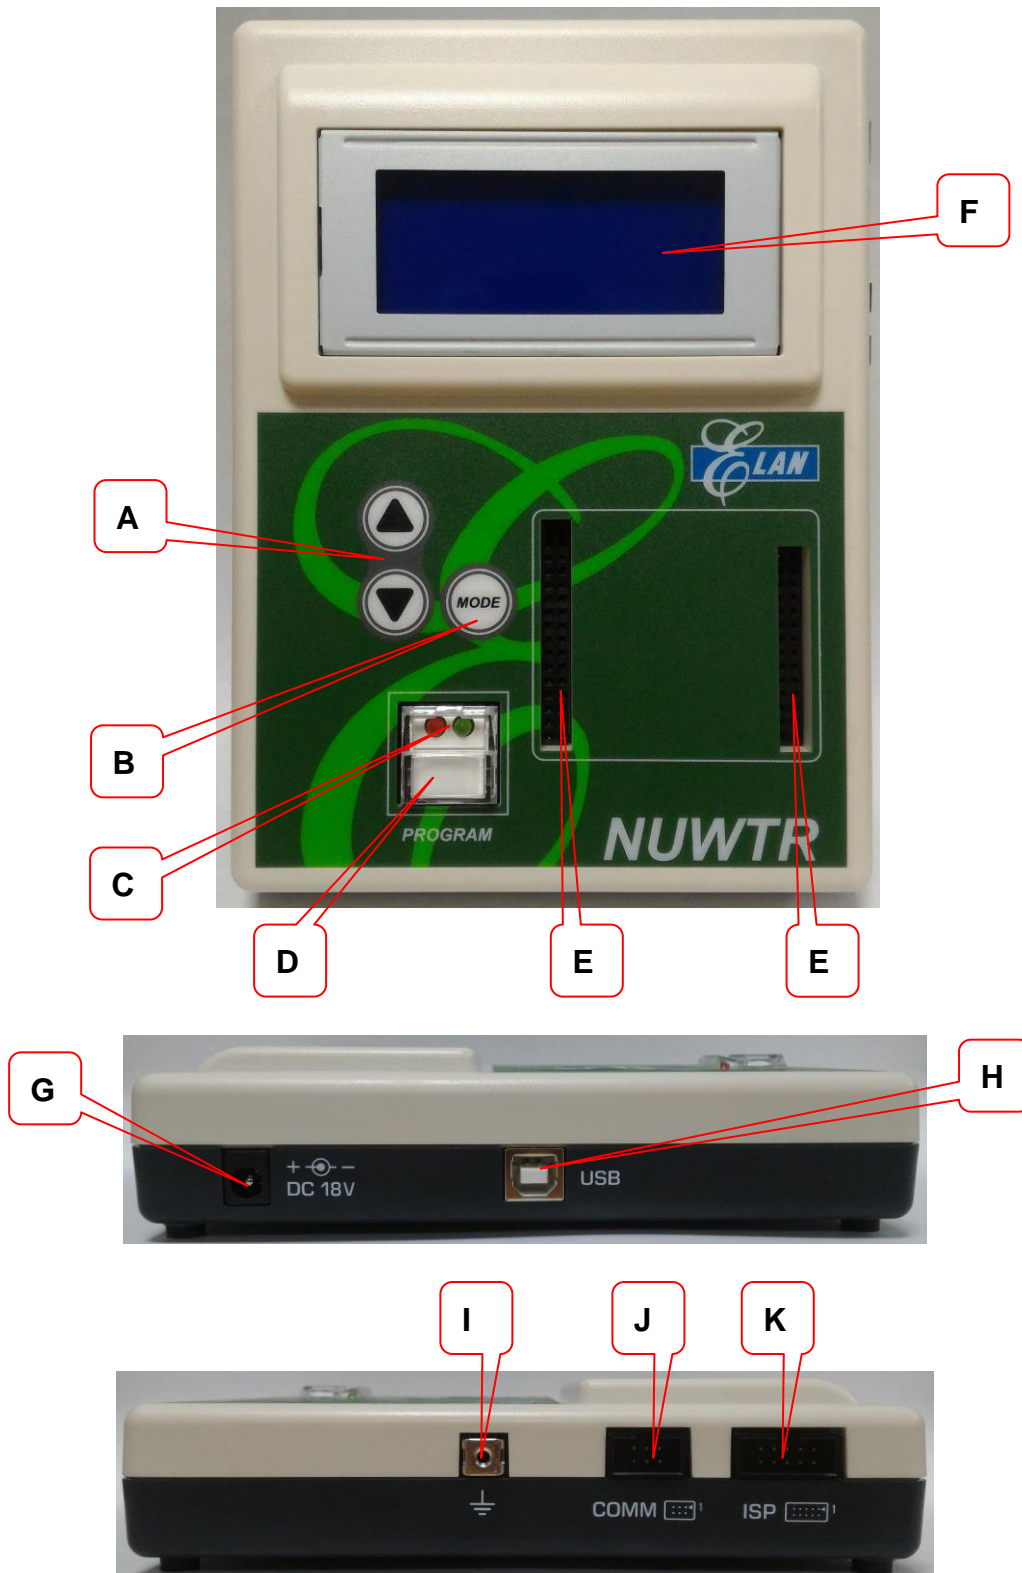

**Description:**

Symbol	Description
A	Up/Down button for scanning and selecting mode and information.
B	Mode button to enable selection of the program mode functions.
C	LEDs which indicate the programming results status.
D	PROGRAM button to run and write programs on the chip.
E	Connector for DIP/SOP/SSOP/QFP/LQFP and other package IC adaptor board.
F	LCM display panel which shows the programming status information.
G	DC power adaptor connector. The power source that will support all NUWTR power requirements.
H	USB Type B connector, this port connects to PC.
I	NUWTR GND terminal
J	Communication Interface for Auto Programming Machines.
K	Target board extension connector for In-System Programming.

**If you have questions about NUWTR hardware or NUWriter software, contact ELAN FAE engineer.**

**ELAN**  
 MICROELECTRONICS CORPORATION  
 No. 12, Innovation 1<sup>st</sup> Rd.,  
 Science-Based Industrial Park, Hsinchu City,  
 Taiwan 308 R.O.C  
 TEL: 886-3-5639977  
<http://www.emc.com.tw>

**ELAN Microelectronics Corp.**  
**Shenzhen, Ltd.**  
 3<sup>rd</sup> Floor, Microprofit Building, Gaoxin South Rd  
 Shenzhen Hi-tech Industrial Park, Shenzhen  
 China  
 TEL: 009-8675526010565  
<http://www.emc.com.tw>