

Ra-01SH SPECIFICATION

Version V1.1 Copyright ©2020



Disclaimer and copyright notice

The information in this article, including the URL address for reference, is subject to change without notice.

The document is provided "as is" without any guarantee responsibility, including any guarantee for marketability, suitability for a specific purpose, or non-infringement, and any guarantee mentioned elsewhere in any proposal, specification or sample. This document does not take any responsibility, including the responsibility for infringement of any patent rights caused by using the information in this document. This document does not grant any license for the use of intellectual property rights by estoppel or other means, whether express or implied.

The test data obtained in the article are all obtained from Anxinke's laboratory tests, and the actual results may vary slightly.

All brand names, trademarks and registered trademarks mentioned in this article are the property of their respective owners, and it is hereby declared.

The final interpretation right belongs to Shenzhen Anxinke Technology Co., Ltd.

Notice

Due to product version upgrades or other reasons, the contents of this manual may change. Shenzhen Anxinke Technology Co., Ltd. reserves the right to modify the contents of this manual without any notice or prompt. This manual is only used as a guide. Shenzhen Anxinke Technology Co., Ltd. makes every effort to provide accurate information in this manual. However, Shenzhen Anxinke Technology Co., Ltd. does not guarantee that the contents of the manual are completely free from errors. All statements and information in this manual And suggestions do not constitute any express or implied guarantee.



Document formulation/revision/abolition resume

| Version | Date | Develop/revise content | Make | Verify |
|---------|-----------|------------------------|-------|--------|
| V1.0 | 2020.8.12 | First edition | MR.Xu | |
| V1.1 | 2020.8.18 | update | MR Xu | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |



CONTENT

| 1. PRODUCT DESCRIPTION | 5 |
|-------------------------|----|
| 2.ELECTRICAL PARAMETERS | 7 |
| 3.DIMENSION | 10 |
| 4.PIN DEFINITION | 11 |
| 5. SCHEMATIC DIAGRAM | 12 |
| 6.DESIGN GUIDE | 13 |
| 8.PACKAGE | 17 |
| 9.CONTACT US | 17 |



1. PRODUCT DESCRIPTION

Anxinke LoRa series modules (Ra-01SH) are designed and developed by Anxinke Technology. This module is used for ultra-long-distance spread-spectrum communication. Its radio chip SX1262 mainly uses LoRa™ remote modem for ultra-long-distance spread-spectrum communication. It has strong anti-interference and can minimize current consumption. With SEMTECH's LoRa™ patented modulation technology, SX1262 has a high sensitivity of over -148dBm, a power output of +22dBm, a long transmission distance and high reliability. At the same time, compared to traditional modulation technology, LoRa™ modulation technology also has obvious advantages in anti-blocking and selection, which solves the problem of distance, anti-interference and power consumption that traditional design solutions cannot simultaneously take into account.

Application areas are used in automatic meter reading, home building automation, security systems, and remote irrigation systems.

Features

- LoRa[™] modem
- Support FSK, GFSK, MSK, GMSK, LoRa[™] and OOK modulation methods
- Support frequency band 803MHz~930MHz
- Working voltage is 3.3V, maximum output is +22dBm, maximum working current is 140mA
- Low power consumption characteristics in receiving state, the minimum receiving current is 4.2 mA, standby current is 1.6mA
- High sensitivity: as low as -140dBm
- Small volume dual row stamp hole patch package
- The module adopts SPI interface, half-duplex communication, with CRC, up to 256-byte packet engine



Main parameters

List 1 Main parameter description

| Model | Ra-01SH |
|------------------------|---|
| Package | SMD16 |
| Size | 17*16*3.2(±0.2)MM |
| Antenna | Compatible with half-hole pads/through-hole pads (need to solder the antenna)/IPEX socket |
| Spectrum range | 803MHz~930MHz |
| Operating temperature | -40 ℃ ~ 85 ℃ |
| Storage environment | -40 °C ~ 125 °C , < 90%RH |
| Power supply | 2.7~3.6V, default 3.3V, current > 200mA |
| Interface | SPI |
| Programma ble bit rate | Up to 300kbps |
| Certificate | 1 |



2.ELECTRICAL PARAMETERS

Ra-01SH series modules are electrostatic sensitive devices, special precautions need to be taken when handling



prompt:

The Ra-01SH module is an electrostatic sensitive device (ESD), which requires special ESD precautions, and should usually be applied to ESD sensitive components. The correct ESD handling and packaging procedures must be adopted during the entire handling, transportation and

operation of any application combined with the Ra-01SH module. Do not touch the module with your hands or use a non-antistatic soldering iron for soldering to avoid damage to the module.



Electrical characteristics

| Parameter | Name | Min | Typical | Max | Unit |
|------------------------|------|-----|---------|-----|---------------|
| Working temperature | TOPR | -40 | 25 | 85 | ${\mathbb C}$ |
| Voltage | VDD | 2.7 | 3.3 | 3.6 | V |

Digital port characteristics

| Description | Typical | | Unit | | |
|----------------------------|---------|---------|---------|-----|------|
| Working frequency | | 410~525 | | MHz | |
| Port | Name | Min | Typical | Max | Unit |
| IO level | VIO | 2.7 | 3.3 | 3.6 | V |
| Input logic level is low | VIL | - | - | 0.2 | V |
| Input logic level is high | VIH | 0.8 | - | - | V |
| Output logic level is low | VOL | - | - | 0.1 | V |
| Output logic level is high | VOH | 0.9 | - | - | V |




·SPI Interface characteristics


| symbol | Description | Condition | Mix | Typical | Max | Unit |
|------------|---|--|-----|---------|-----|---------|
| Fsck | SCK frequency | - | - | - | 10 | MH z |
| tch | SCK high time | - | 50 | - | - | ns |
| tcl | SCK low time | - | 50 | - | - | ns |
| trise | SCK rise time | - | - | 5 | - | ns |
| tfall | SCK fall time | - | - | 5 | - | ns |
| tsetup | MOSI establishment time | From MOSI change to SCK rising edge | 30 | - | - | ns |
| thold | MOSI maintenance time | Change from rising edge of SCK to MOSI | 20 | - | - | ns |
| tnsetup | NSS establishment time | From NSS falling edge to SCK rising edge | 30 | - | - | ns |
| tnhold | NSS maintenance time | From SCK falling edge to NSS rising edge, normal mode | 100 | - | - | ns |
| tnhigh | NSS high time between spi visits | - | 20 | - | - | ns |
| T_DAT A | DATA maintenance and establishment time | - | 250 | - | - | ns |




3.DIMENSION

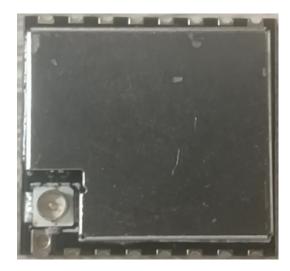



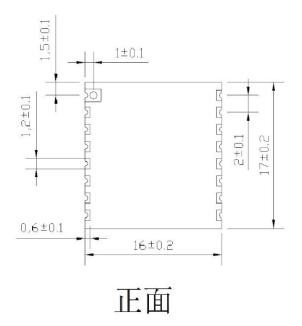

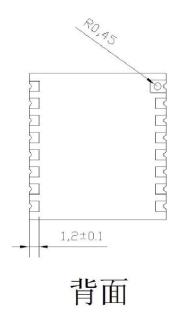



4.PIN DEFINITION

The Ra-01SH module has a total of 16 interfaces. As shown in the pin diagram, the pin function definition table is the interface definition.



Ra-01SH Pin diagram

PIN function definition


| No. | Name | Function description |
|-----|-------|------------------------------------|
| 1 | ANT | Connect the antenna |
| 2 | GND | Ground |
| 3 | 3.3V | Typical 3.3V power supply |
| 4 | RESET | Reset |
| 5 | TXEN | RF control port |
| 6 | DIO1 | Digital IO1 software configuration |
| 7 | DIO2 | Digital IO2 software configuration |
| 8 | DIO3 | Digital IO3 software configuration |
| 9 | GND | Ground |
| 10 | BUSY | Status indicator |
| 11 | RXEN | RF control port |
| 12 | SCK | SPI clock input |
| 13 | MISO | SPI data output |
| 14 | MOSI | SPI data input |
| 15 | NSS | SPI chip select input |
| 16 | GND | Ground |



The 3 general-purpose IO pins of SX1262 are available in LoRa[™] mode. Their mapping relationship depends on the configuration of the two registers RegDioMapping1 and RegDioMapping2.

| operating | DIOx | DIO | DIO2 | DIO1 |
|-----------|---------|-------|---------|---------|
| mode | Mapping | 3 | | |
| | 00 | Cad | Fhss | RxRime |
| | | Don | Change | out |
| | | е | Channel | Out |
| | | Valid | Fhss | Fhss |
| | 01 | Hea | Change | Change |
| All | | der | Channel | Channel |
| 7 | | Payl | Fhss | |
| | 10 | oad | | CadDete |
| | | Crc | Change | cted |
| | | Error | Channel | |
| | 11 | - | - | - |


5. SCHEMATIC DIAGRAM

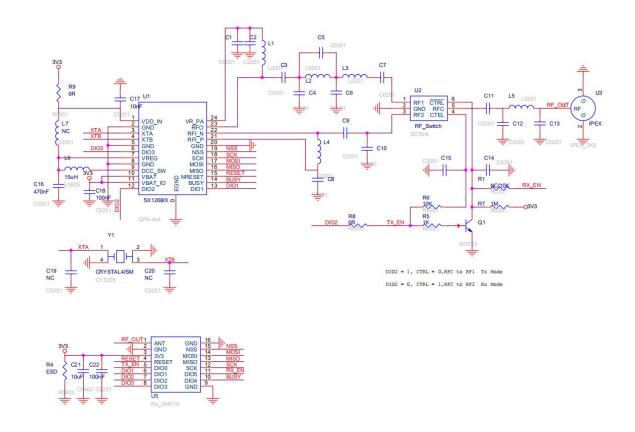



6.DESIGN GUIDE


1. Application circuit

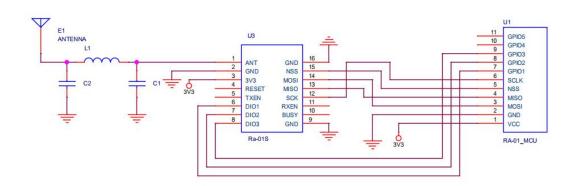

2. Recommended module package design size

Note: This is the Ra-01SH module package drawing. It is recommended to design the PCB board according to this drawing so that the module can work normally on the PCB board; and when designing the pads, pay attention to the design of the pads on the PCB. The group corresponding to the pad shrinks and offsets, and the PCB pad expands from the module pad without affecting the use of the module.

3. Antenna installation

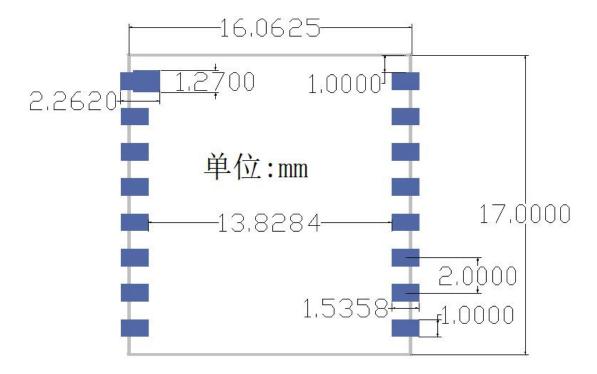




- (1) Ra-01SH needs to be used for soldering antennas, and the module is compatible with half-hole pads and round-hole pads.
- (2) In order to achieve the best effect of the antenna, the antenna assembly location should be far away from the metal parts.

4. Power supply

- (1) Recommended 3.3V voltage, peak current recommended above 200mA
- (2) \ It is recommended to use LDO for power supply; if DC-DC is used, the ripple is recommended to be controlled within 30mV.
- (3) It is recommended to reserve the position of the dynamic response capacitor for the DC-DC power supply circuit, which can optimize the output ripple when the load changes greatly.
- (4) . It is recommended to add ESD devices to the 3.3V power interface. .

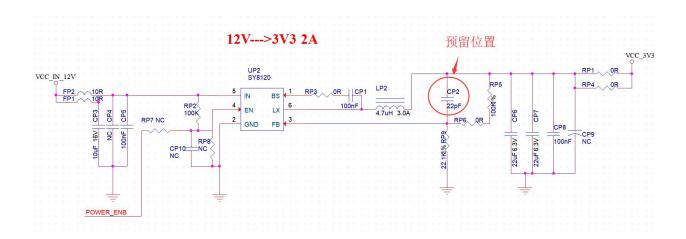




5. Use of GPIO port


- (1) There are some GPIO ports on the periphery of the module. If you need to use it, it is recommended to connect a 10-100 ohm resistor in series with the IO port. This can suppress overshoot and make the levels on both sides more stable. It is helpful for EMI and ESD.
- (2) For the pull-up and pull-down of special IO ports, please refer to the instructions in the specification, which will affect the startup configuration of the module.
- (3) The IO port of the module is 3.3V. If the main control and the IO level of the module do not match, a level conversion circuit needs to be added.
- (4) \ If the IO port is directly connected to a peripheral interface or terminal such as a header, it is recommended to reserve an ESD device near the terminal of the IO trace.

 Image Level conversion circuit

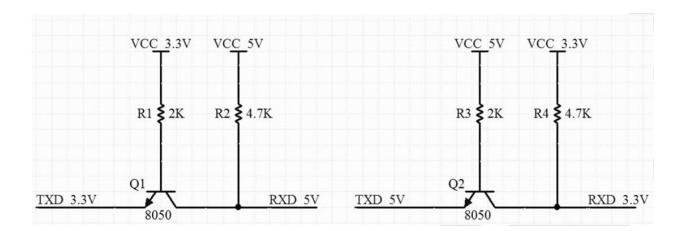



7.REFLOW SOLDERING CURVE

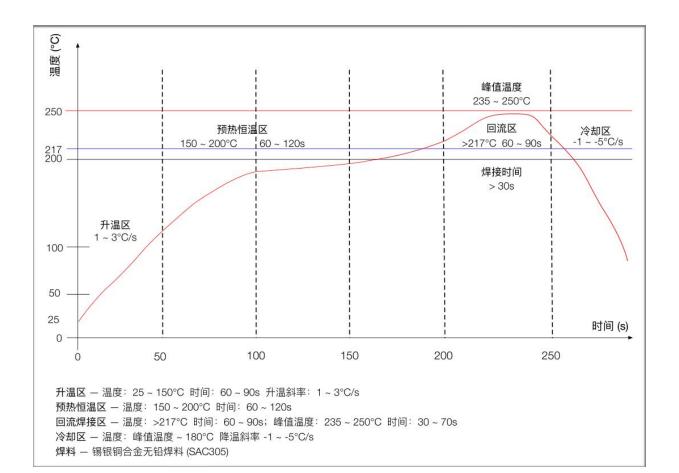



8.PACKAGE

As shown below, the packaging of Ra-01SH is braid.



9.CONTACT US

Website: https://www.ai-thinker.com

Development DOCS: https://docs.ai-thinker.com

Forun: http://bbs.ai-thinker.com

Sample purchase: https://anxinke.taobao.com

Business: sales@aithinker.com

Technical support: support@aithinker.com

Address: 410, Block C, Huafeng Smart Innovation Port,

Gushu 2nd Road, Xixiang, Baoan District, Shenzhen

Tel: 0755-29162996

